



Adjust the diffuser 5 degrees towards the exterior of the building. Confirm diffuser adjustment after power has been supplied to the Air Barrier. See owners manual.

CE CERTIFIED

ENERSHIELD EUROPE Calderhead Road Shotts Lanarkshire Scotland Tel.+44(0)1501 826501 FAX+44(0)1501 826501 E-mail: enquiries@enershield.eu www.enershield.eu	DURASHIELD-HD AIR BARRIER		DURASHIELD-HD	DSH-144
	Voltage 400/690V 3 Phase 50Hz	Blowers	Air Velocity (fpm) (m/s)	5500/27.9
	Motor(s) 2 @ 4kW	6	Air Volume (cfm) (l/s)	19350/9132
	1350 RPM, IE2		Total watts (Kw)	8
	FLA 8.12/4.71		Weight lbs/Kg	812 lbs/370 Kg