


Adjust the diffuser 5 degrees towards the exterior of the building. Confirm diffuser adjustment after power has been supplied to the Air Barrier. See owners manual.

**EXTENDABLE SLIDERS 4 PROVIDED**

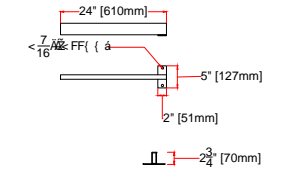

CE Certified

<p>ENERSHIELD EUROPE</p> <p>Calderhead Road</p> <p>Shotts, Lanarkshire, Scotland</p> <p>Tel. +44(0)1501 826501 FAX+44(0)1501 826501</p> <p>E-mail: <a href="mailto:enquiries@enershield.eu">enquiries@enershield.eu</a></p> <p><a href="http://www.enershield.eu">www.enershield.eu</a></p>	<b>ENERSHIELD AIR BARRIER</b>		Xtremeshield	XS-270	<p><b>Project:</b></p> <hr/> <p><b>Engineer:</b></p> <hr/> <p><b>Tag:</b></p>
	VOLTAGE	Blowers	Air Velocity (fpm) (m/s)	7500/38.1	
	400/690 3phase 50 Hz	9	Air Volume (cfm) (l/s)	53,607/25,300	
	Motor (s) IE2 1465RPM		Total kW	30	
2 @ 15kW total		Weight lbs/Kg	2000/910		
28.7/16.6 amps per motor					
57.4/33.2 amps total					